# **INSTALLATION OPTIONS**

### WALL MOUNTING ARM:

TOOLS: Phillips & Slotted Screwdrivers, Pencil, Drill, 1/4" Bit (7.5mm), 1/4" Hex Driver, Pliers

## Install preparation:

- Remove the mounting ring from the base by loosening the retainer ring on the universal mount arm.
- Hold the base in the desired location and mark three screw holes with pencil.
- For drywall, drill a 1/4" (7.5mm) pilot hole and use the screwdriver to drive the provided white plastic anchors into the wall.
- Use the screwdriver to drive the screws into the holes, holding the base in place.

### 2. Attach the Mounting Arm to the ScentWave:


- A. Attach the mounting plate to the pivot end of the wall mounting bracket through the center hole using the provided lock nut and screw. Tighten using pliers to hole the nut in place.
- B. Attach the mounting plate assembly to the bottom of the ScentWave using the provided plate screws, pilot holes, Slotted or Hex Driver.


### 3. Attach the assembly to the wall:

- Attach the wall mounting arm to the base using the retainer ring on the arm and tighten at the desired angle
- Adjust the pivot end as necessary for a correct angle and secure fit.

### 4. Power the ScentWave

- Plug the power cord into both the wall outlet and ScentWave.
- Extra power cord should be secured out of sight.



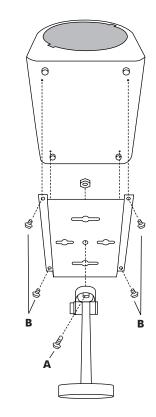



## WALL MOUNTING PLATE:

TOOLS: Phillips & Slotted Screwdrivers, Pencil, Drill, 1/4" Bit (7.5mm), Level, 1/4" Hex Driver

## 1. Install preparation:

- Ensure that the wall mounting plate is level and mark two hole locations with a pencil. Choose either the small or large openings.
- For drywall, drill a 1/4" (7.5mm) pilot hole and use a screwdriver to drive the provided white plastic anchors into the wall.
- Drive the screws into the anchors leaving 1/4" (7.5mm) between the top of the screw and the wall.

## 2. Attach the Mounting Plate to the ScentWave:

 Attach the mounting plate to the bottom of the ScentWave<sup>™</sup> using the provided plate screws, pilot holes, Slotted or Hex Driver.

## 3. Attach the assembly to the wall:

- Line up the slots in the mounting plate with the screws in the wall and slide into place.
- Adjust the wall screws as necessary for a tight fit.

#### 4. Power the ScentWave

- Plug the power cord into both the wall outlet and ScentWave.
- Extra power cord should be secured out of sight.

